
# Quick Manual

# 1. Open door from outside

Enter the registered PIN code

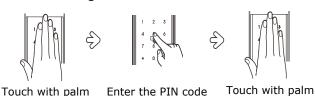


## 2. Lock door from inside


- ① If you close a door in Auto Lock status, it will be closed within 5 seconds by the automatic lock sensor.
- ② In Manual Lock status




turn the thumb-turn knob on **n** status.

# 3. Open door from inside

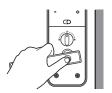

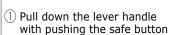

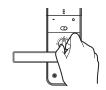

or press \*

② turn the thumb-turn knob on fstatus.

## 4. Break-in / damage alarm

Break-in: When someone tries to Break-in by opening a door when it is locked, the alarm will sound.


Damage: When the front body was damaged due to forced separation or drilling, the alarm will sound.



## 5. How to release alarm

From outside: Enter the registered PIN code From inside: Press the ® button for 5 seconds

## 6. Emergency power and reset

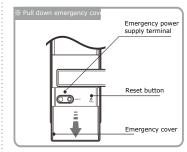

## To supply emergency power

Open the emergency cover. Keep contacting the 9V battery(optional) onto the emergency power supply terminal.



### Reset button


Press reset button located in the right of [emergency power terminal] with a pin or pen and try again with the card or PIN code when you can't operate door lock.



## 7. To replace battery

#### Expiry period


The product uses four 1.5V(LR6) alkaline AA batteries.
They may sustain 1 year if used 10 times a day.
(\* The battery duration varies in the temperature, humidity, the number of use, and the quality of the battery.)

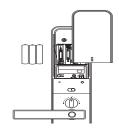

#### ■ Low battery alarm

You must replace all 4 batteries for the following cases:

- \* The Low Battery Lamp on the front body lights on
- \* The Low Battery Lamp on the back body flickers red
- \* The alarm melody goes off

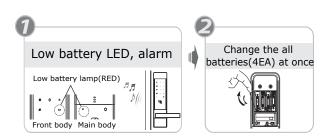

## 8. Call centre

Please call to our call centre when you have any problem about digital door lock.

- call centre number: 0120-102-950
- Japanese: 24H 365Days
- English and Korean:
   Weekday 09:00a.m. ~ 18:00p.m.
- \*Sorry, we don't serve Chinese.
  Please contact with Japanese, English or Korean.